


X-TREME WINGS™ 30"

BASIC FLIGHT ADJUSTMENTS


TO START, FIRST TRY TO ACHIEVE LEVEL FLIGHT.

HOLDING

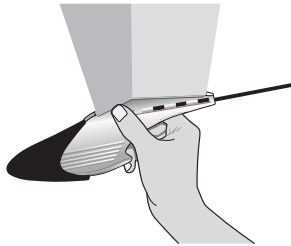

1. PINCH CENTER OF FUSELAGE WITH THUMB.


- Or -

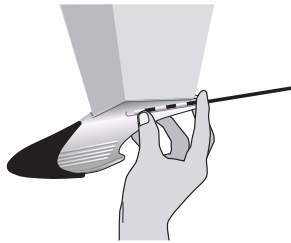

2. PLACE MIDDLE AND INDEX FINGER BEHIND CENTER OF MAIN WING.

IF IT'S DIVING

PUSH BOTH FLAPS UP TO INCREASE UP ELEVATOR.

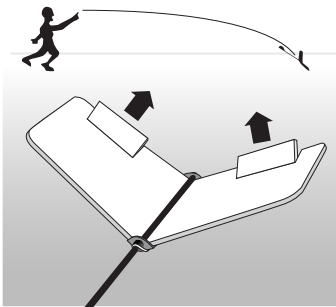


IF IT'S STALLING

PUSH BOTH FLAPS DOWN TO INCREASE DOWN ELEVATOR.




MAKE IT TURN RIGHT

PUSH RIGHT FLAP UP AND LEFT FLAP DOWN.

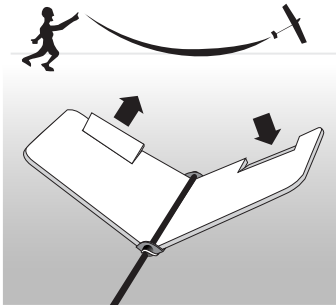


MAKE IT TURN LEFT

PUSH LEFT FLAP UP AND RIGHT FLAP DOWN.

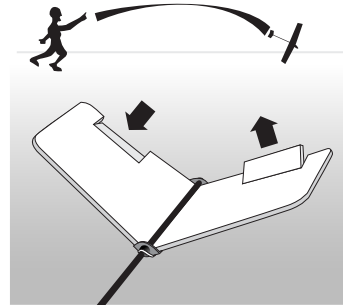

ADVANCED STUNTS


THIS IS A PERFORMANCE TOY. IT TAKES PATIENCE, SKILLS AND PRACTICE TO MAXIMIZE YOUR DISTANCE AND TIME OF FLIGHT. TAKE YOUR TIME AND LEARN THE PROPER TECHNIQUES AND ADJUSTMENTS.

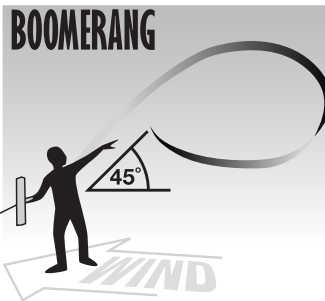

1.) Set Tail Wing Flaps for a **right turn**.


2.) Position yourself for a **side arm throw** with the glider tilted sideways (as shown in illustration above).

3.) Throw the glider up into the wind at a 45 degree angle.

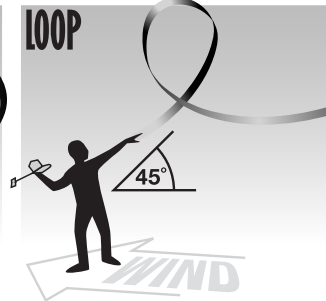

1.) Set the Tail Wings to produce an **up elevator** motion.

2.) With the glider level, throw it up into the wind at a 45 degree angle.

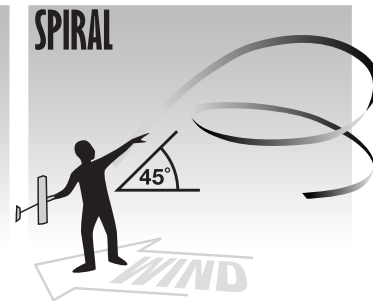

1.) Set the Tail Wings to produce an **up elevator** motion.

2.) Position yourself for a **side arm throw** with the glider tilted sideways (as shown in illustration above).

3.) Throw the glider up into the wind at a 45 degree angle.

For more help & tricks visit:
www.xkites.com



GLIDERS™
A DIVISION OF XCONCEPTS®